



5-Compartment Cash Box with Combination Lock

User Manual


Default code is **000**

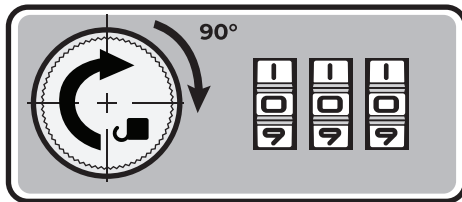


1. Turn knob 90 degrees clockwise to unlock.

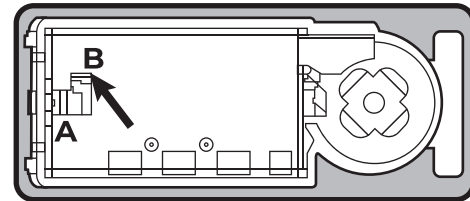

2. Set back switch from A to B.

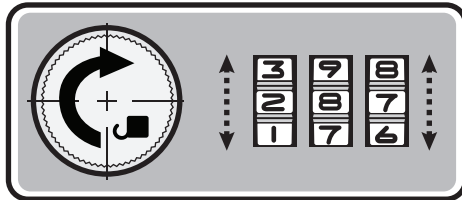

3. Set your personal combination code.

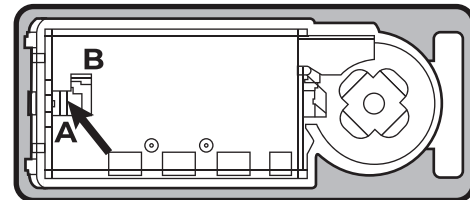

4. Set back switch from B to A.

5. Your lock should now be locked with the code set. ✓