- Connect Volcora Printer to the Router, and then connect Wireless host (such as cellphone, Pad etc.) to this Router's WIFI;
- 2. Power on Volcora Printer;



3. Open APP " EasyConfig... ", Select "Set IP"



4. Click to search all printers in your LAN, find "Volcora Printer"



5. Click "Manually Set IP" to enter into IP setting interface



Se ava	EasyConfigV1.2		ire IP
	Other NetworkSegent Set		
Seria	IP:		TIP
MAC	SubnetMas k:		-1.119
	GateWay:	_	
	Setting		
	Local Net Set		
	host machine IP:192.168.3.119 router IP:192.168.3.1		
	192.168.3.210	set IP	
	192.168.3.214	set IP	
	192.168.3.215	set IP	
	192.168.3.216	set IP	
	192.168.3.217	set IP	
	192.168.3.218	set IP	

6. Select the needed IP address (for example "192.1683.216"), and then click corresponding "set IP"



7. If Volcora Printer IP was setting successfully, it will display "set successfully"

